



## BLIND MEASURING GUIDE


We can fit your blind inside or outside of the recess of your window...

INSIDE



Most customers decide to hang their blind inside the window recess. You should have your blind inside the window recess if you intend to dress your window with curtains as well as a blind or if you prefer the look of the blind this way. All you need to do is simply measure the width and drop of the window recess.

OUTSIDE

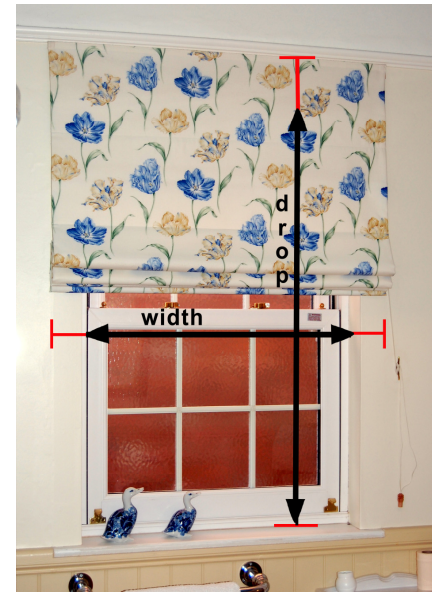

You may prefer the blind to hang outside the window frame. Decide how much you wish the blind to overlap the recess at the top and the sides - we recommend at least 75mm or 3 inches each side to avoid gaps of light. These are your overlap measurements (as shown in red above). Simply measure the width and drop of the recess and add these to the overlap measurements.